

# Human Anti-Hepatitis A Virus IgM Antibody (Anti-HAV) ELISA Cat No: K12-1591

# Principle:

The Human Anti-hepatitis A virus IgM antibody ELISA is sandwich enzyme-linked immunosorbent assay (ELISA) to assay the level of Human Anti-hepatitis A virus IgM antibody in samples. Standards or Samples are added to the microtiter well which is pre-coated with Human Anti-hepatitis A virus IgM antibody monoclonal Antibody. Biotinylated Human Anti-hepatitis A virus IgM antibody antibody is added to the microplate to form a complex. Subsequently Streptavidin-HRP conjugate is pipetted. After incubation and a washing step TMB Substrate A and B, are added. Blue color develops on incubation and the reaction is stopped with a Stop Solution to form a yellow color. The concentration of the Human Anti-hepatitis A virus IgM antibody in the samples is directly proportional to the yellow color developed in the wells.

#### Intended Use:

This Kit is used to assay the level of Human Anti-hepatitis A virus IgM antibody in human serum and plasma samples. The Kit is For Laboratory / Research Use Only.

#### Materials provided in the kit:

- 1. Anti-Human Anti-hepatitis A virus IgM antibody Coated Microtitre Plate (96 wells) 1 no
- 2. Biotinylated Human Anti-hepatitis A virus IgM antibody Antibody 1 ml
- 3. Human Anti-hepatitis A virus IgM antibody Standard (concentrated, 320 pg/ml) 0.5 ml
- 4. Streptavidin-HRP Conjugate 6 ml
- 5. (30X) Wash Buffer 20 ml
- 6. Standard Diluent- 3 ml
- 7. TMB Substrate A 6 ml
- 8. TMB Substrate B 6 ml
- 9. Stop Solution 6 ml
- 10. Instruction Manual

# Materials to be provided by the End-User:

- 1. Microplate Reader able to measure absorbance at 450 nm.
- 2. Adjustable pipettes to measure volumes ranging from 50 ul to 1000 ul.
- 3. Deionized (DI) water.
- 4. Wash bottle or automated microplate washer.
- 5. Graph paper or software for data analysis.
- 6. Tubes to prepare standard/sample dilutions.
- 7. Timer.
- 8. Absorbent paper.
- 9. Incubator

# **Storage Information:**

- 1. All reagents should be stored at 2°C to 8°C.
- 2. All the reagents and wash solutions are stable until the expiration date of the kit.
- 3. 30 minutes prior before use, bring all components to room temperature (18-25°C). Store all the components of the kit at its appropriate storage condition after use.
- 4. The Substrate is light-sensitive and should be protected from direct sunlight or UV sources.

# Health Hazard Warnings:

- 1. Reagents that contain preservatives may be harmful if ingested, inhaled or absorbed through the skin. Refer to the MSDS online for details.
- 2. To reduce the likelihood of blood-borne transmission of infectious agents, handle all samples in accordance with NCCLS regulations.

# **Specimen Collection and Handling:**

Specimens should be clear and non-hemolyzed. Samples should be run at a number of dilutions to ensure accurate quantitation.

1. The kit cannot test samples which contain NaN<sub>3</sub>, because NaN<sub>3</sub> inhibits HRP activity.



- Extract as soon as possible after specimen collection as per relevant procedure. The samples should be tested as soon as possible after the extraction. Alternately the extracted samples can be kept in -20°C. Avoid repeated freeze-thaw cycles.
- 3. **Serum-** Coagulate at room temperature for 10-20 minutes; centrifuge for 20-min at 2000-3000 rpm. Remove the supernatant. If precipitation appears, recentrifuge.
- 4. **Plasma-** Use EDTA or citrate plasma as an anticoagulant, mix for 10-20 minutes; centrifuge for 20-min at the 2000-3000 rpm. Remove the supernatant. If precipitation appears, recentrifuge.

Note: Grossly hemolyzed samples are not suitable for use in this assay.

#### Reagent Preparation (all reagents should be diluted immediately prior to use):

- 1. Bring all reagents to Room Temperature prior to use.
- 2. To make 1X Wash Solution, add 10 ml of 30X Wash Buffer in 290 ml of DI water.

#### **Procedural Notes:**

- 1. In order to achieve good assay reproducibility and sensitivity, proper washing of the plates to remove excess un-reacted reagents is essential.
- 2. High Dose Hook Effect may be observed in samples with very high concentrations of Human Anti-hepatitis A virus IgM antibody. High Dose Hook Effect is due to excess of antibody for very high concentrations of Human Anti-hepatitis A virus IgM antibody present in the sample. High Dose Hook effect is most likely encountered from samples early in the purification process. If Hook Effect is possible, the samples to be assayed should be diluted with a compatible diluent. Thus if the Human Anti-hepatitis A virus IgM antibody concentration of the undiluted sample is less than the diluted sample, this may be indicative of the Hook Effect.
- 3. Avoid assay of Samples containing Sodium Azide (NaN<sub>3</sub>), as it could destroy the HRP activity resulting in under-estimation of the amount of Human Anti-hepatitis A virus IgM antibody.
- 4. It is recommended that all Controls and Samples be assayed in duplicates.
- 5. Maintain a repetitive timing sequence from well to well for all the steps to ensure that the incubation timings are same for each well.
- 6. If the Substrate has a distinct blue color prior to use it may have been contaminated and use of such substrate can lead to poor sensitivity of the assay.
- 7. The plates should be read within 30 minutes after adding the Stop Solution.
- 8. Make a work list in order to identify the location of Controls and Samples.

#### **Assay Procedure:**

- 1) Bring all reagents to room temperature prior to use. It is strongly recommended that all Standards and Samples should be run in duplicates or triplicates. A standard curve is required for each assay.
- 2) Standards Dilution: Prepare the standards as per the table given below using the provided standard Concentration and Standard Diluent.

Standard Concentration	Standard No	Dilution Particulars
320 pg/ml	Standard, concentrated	Original Standard provided in the Kit
160 pg/ml	Standard No.5	120 ul Original Standard + 120 ul Standard diluent
80 pg/ml	Standard No.4	120 ul Standard No.5 + 120 ul Standard diluent
40 pg/ml	Standard No.3	120 ul Standard No.4 + 120 ul Standard diluent
20 pg/ml	Standard No.2	120 ul Standard No.3 + 120 ul Standard diluent
10 pg/ml	Standard No.1	120 ul Standard No.2 + 120 ul Standard diluent

\* refer accompanying sheet with the Standard, concentrated in the kit

- 3) The quantity of the plates depends on the quantities of samples and standards to be tested. It is suggested to remove the number of strips required for the assay.
- 4) Pipette 50 ul of Standards and 40 ul Samples into the respective wells as mentioned in the work list.
- Note do not add the sample, Biotin Conjugate and Streptavidin-HRP to the blank well.
- 5) Pipette 10 ul of Biotinylated Human Anti-hepatitis A virus IgM antibody Antibody into each sample well.
- Do not pipette into the blank and standards wells.
- 6) Pipette 50 ul of HRP Conjugate into each sample and standards well.
- Do not pipette into the Blank well.
- 7) Cover the plate and incubate for 1 hour at 37°C in the incubator.




- 8) Aspirate and wash plate 4 times with **1X Wash Buffer** and blot residual buffer by firmly tapping the plate on an absorbent paper. Wipe off any liquid from the bottom of the microtiter wells as any residue can interfere in the reading step. All the washes should be performed similarly.
- 9) Add TMB Substrate A 50 ul and TMB Substrate B 50 ul respectively to each well. Gently mix.
- 10) Incubate for 10 min at 37°C in dark.
- 11) Pipette 50 ul of Stop Solution. Wells should turn from blue to yellow in color.
- 12) Read the absorbance at 450 nm within 15 minutes after adding the Stop Solution. Blank the zero standard for net absorbance.

#### **Calculation of Results:**

Determine the Mean Absorbance for each set of duplicate or triplicate Standards and Samples. Using standard graph paper, plot the average value (absorbance 450nm) of each standard on the Y-axis versus the corresponding concentration of the standards on the X-axis. Draw the best fit curve through the standard points. To determine the unknown concentrations, find the unknown's Mean Absorbance value on the Y-axis and draw a horizontal line to the standard curve. At the point of intersection, draw a vertical line to the X-axis and read the concentration. If samples were diluted, multiply by the appropriate dilution factor.

Software which is able to generate a cubic spline curve-fit or a polynomial regression to the 2<sup>nd</sup> order is best recommended for automated results.

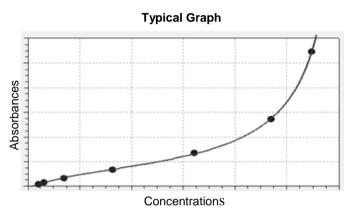

#### **Precautions:**

Do not mix reagents from different kits or lots. Reagents and/or antibodies from different manufacturers should not be used with this set.

#### **Performance Characteristics:**

Please note that this validation is performed in our laboratory and will not necessarily be duplicated in your laboratory. This data has been generated to enable the user to get a preview of the assay and the characteristics of the kit and is generic in nature. We recommend that the user performs at the minimum; the spike and recovery assay and the dilutional linearity assay to assure quality results. For a more comprehensive validation, the user may run the protocols as suggested by us herein below to develop the parameters for quality control to be used with the kit.

#### Sensitivity:

Limit Of Detection: It is defined as the lowest detectable concentration corresponding to a signal of Mean of '0' standard plus 2\* SD. 10 replicates of '0' standards were evaluated and the LOD was found to **0.778 pg/ml.** 

#### Specificity:

The antibodies used in the kit for capture and detection are specific for human Anti-hepatitis A virus IgM antibody.

#### Assay Range: 10 pg/ml to 160 pg/ml

Precision: Intra-Assay: CV<10% Inter-Assay: CV<12%



#### Linearity:

The Linearity of the kit was assayed by testing samples spiked with appropriate concentration of Human Antihepatitis A virus IgM antibody and their serial dilutions. The results were demonstrated by the percentage of calculated concentration to the expected.

Sample	1:2	1:4	1:8
serum (n=5)	85-105%	86-109%	83-112%
EDTA plasma (n=5)	84-106%	85-117%	83-118%
heparin plasma (n=5)	83-99%	80-95%	82-93%

#### LIMITED WARRANTY

KinesisDx does not warrant against damages or defects arising in shipping or handling, or out of accident or improper or abnormal use of the product; against defects in products or components not manufactured by KinesisDx, or against damages resulting from such non-KinesisDx made products or components. KinesisDx passes on to customer the warranty it received (if any) from the maker thereof of such non-Krishgen made products or components. This warranty also does not apply to product to which changes or modifications have been made or attempted by persons other than pursuant to written authorization by KinsisDx.

THIS WARRANTY IS EXCLUSIVE. The sole and exclusive obligation of KinesisDx shall be to repair or replace the defective product in the manner and for the period provided above. KinesisDx shall not have any other obligation with respect to the products or any part thereof, whether based on contract, tort, and strict liability or otherwise. Under no circumstances, whether based on this Limited Warranty or otherwise, shall KinesisDx be liable for incidental, special, or consequential damages.

This Limited Warranty states the entire obligation of KinesisDx with respect to the product. If any part of this Limited Warranty is determined to be void or illegal, the remainder shall remain in full force and effect.

KinesisDx. 2020

THANK YOU FOR USING KINESISDX PRODUCT!



# Human Anti-Hepatitis A Virus IgM Antibody (Anti-HAV) ELISA

# **ASSAY PROCEDURE**

1	Bring all reagents to room temperature before use.			
2	Pipette Standards 1 - 6 Samples	50 ul	40 ul	
3	Pipette Human Anti-hepatitis A virus IgM antibody Biotin Detection Antibody		10 ul	
4	Pipette Streptavidin :HRP Conjugate	50 ul	50 ul	
5	Incubate	hcubate 60 minutes (37°C)		
6	1X Wash Buffer	Decant, 4 x 300 ul		
7	Pipette Substrate (A)	50 ul	50 ul	
8	Pipette Substrate (B)	50 ul	50 ul	
9	Incubate in the dark	10 minutes (37°C)		
10	Pipette Stop Solution	50 ul	50 ul	
11	Measure 450 within 15 mins			



### Troubleshooting:

Problem	Possible cause	Investig
High Absorbances	<ol> <li>Cross-contamination from other specimens</li> <li>Insufficient or inefficient washing or reading</li> <li>Wavelength of filter not correct.</li> </ol>	<ul> <li>Repeat assay ta</li> <li>Check washer e</li> <li>Check that the vavelength spe reference filter</li> </ul>
	4. High assay background.	<ul> <li>reference filter</li> <li>Repeat assay a sample diluent of</li> </ul>
	<ol> <li>Contaminated TMB</li> <li>Incubation time too long or incubation temperature too high.</li> <li>Incorrect dilution of serum</li> </ol>	<ul> <li>Check that TME</li> <li>Check incubatio</li> <li>Check incubato</li> <li>Repeat assay, e</li> </ul>
Low Absorbances	<ol> <li>Incubation time too shot or incubation temperature too low.</li> <li>Incorrect dilution or pipetting of sera</li> <li>Incorrect filter wavelength.</li> </ol>	<ul> <li>Ensure time and</li> <li>Check incubato</li> <li>Repeat assay e</li> <li>Ensure controls</li> <li>Check the wave</li> </ul>
	4. Contaminated Conjugate solution.	<ul> <li>spectrophotome 600-650nm.</li> <li>Dispense conjugavoid transferrir</li> <li>Do not return ur</li> <li>Ensure all pipet Conjugates are</li> </ul>
	<ol> <li>5. Kit has expired.</li> <li>6. Air blank reading high.</li> <li>7. Incorrect storage of kit.</li> </ol>	<ul> <li>bleach.</li> <li>Check expiration</li> <li>Investigate cause</li> <li>Ensure kit is store</li> </ul>
	<ol> <li>Kit reagents not equilibrated at room temperature</li> <li>Incorrect reagents used.</li> </ol>	<ul> <li>desiccant sache</li> <li>Allow sufficient temperature priot</li> <li>Check the reagonsheet.</li> </ul>
	10.Over washing of plate (e.g. inclusion of a long soak step).	<ul> <li>Repeat assay u</li> </ul>
Poor Duplicates	<ol> <li>Poor mixing of samples.</li> <li>Poor pipette precision</li> </ol>	<ul> <li>Mix reagents ge</li> <li>Calibration may</li> <li>Check pupating and ensure excompany</li> </ul>
	<ol> <li>Addition of reagents at inconstant timing intervals; reagent addition takes too long, air bubbles when adding reagents.</li> </ol>	<ul> <li>&gt; Use consistent t</li> <li>&gt; Ensure all dilution plate.</li> </ul>
	<ol> <li>Inefficient washing - Wash buffer left in wells, inconsistent washing, inadequate washing.</li> </ol>	<ul> <li>Improve pipettin</li> <li>Tap out wash by</li> <li>Check wells are</li> </ul>
	<ol> <li>Reader not calibrated or warmed up prior to plate reading.</li> </ol>	when washing. > Check reader provide the second se
	6. Optical pathway not clean	<ul> <li>Gently wipe bot</li> <li>Check reader lig</li> </ul>
	<ol> <li>Spillage of liquid from wells</li> <li>Serum samples exhibit microbial growth, haemolysis or lipaemia.</li> <li>Uneven well volumes due to evaporation.</li> </ol>	<ul> <li>Repeat assay, t</li> <li>It is not recomm growth, haemoly</li> <li>Cover plate with</li> </ul>
All wells yellow	<ol> <li>Contaminated TMB.</li> <li>Contaminated reagents (e.g. Conjugate,</li> </ol>	<ul><li>Check TMB is c</li><li>Check reagents</li></ul>
	Wash buffer). 3. Incorrect dilution of serum. 4. Incorrect storage of kit.	<ul> <li>Repeat assay, e</li> <li>Ensure kit is sto</li> </ul>
	<ol> <li>Inefficient washing- Wash buffer left in wells, inconsistent washing, inadequate washing.</li> </ol>	<ul> <li>desiccant sache</li> <li>Tap out wash be</li> <li>Check wells are washing</li> </ul>

6. If Conjugate reconstitute is required -Conjugate reconstituted incorrectly.

#### ation/Actions

- aking care when washing and pipetting.
- fficiency
- wavelength is 450nm. If a dual
- ctrophotometer is available, set the . between 600-650 nm.
- and include a well that contains only or sample absorbent (i.e. a blank well).
- is colorless or faint blue.
- on time and temperature.
- r is at the correct temperature.
- ensuring correct serum dilution is used.
- d temperature of assay incubation are correct.
- r is set at the correct temperature.
- nsuring correct dilutions and volumes are used. are sufficiently mixed.
- length is set at 450nm. If a dual wavelength ter is available, set the reference filter between
- gate directly from the bottle using clean pipette tip; g Conjugate to another container if possible.
- nused Conjugate to bottle.
- tes and probes used to dispense the clean and free from serum, detergent and
- n date of kit and do not use if expired. ses of high background absorbance.
- pred at 2-8°C, plate is sealed in foil pouch and t is blue/purple.
- time for reagents to equilibrate to room or to assay.
- ents used match those listed on the specification
- sing recommended wash procedure.

- ently and equilibrate to room temperature.
- need to be checked.
- technique-change pipette tip for each sample ess liquid is wiped from the outside of the tip.
- iming when adding reagents. ons are made before commencing addition to
- g technique and skill.
- uffer after washing.
- sufficiently and uniformly filled and aspirated
- recision
- anual to ascertain warm up time of instrument.
- tom of plate.
- ht source and detector are clean.
- aking care not to knock the plate or splash liquid ended to use serum samples exhibiting microbial ysis or lipaemia.
- a lid or plate sealer (not provided).
- olorless or faint blue.
- for turbidity.
- ensuring correct serum dilution is used.
- red at 2-8°C, plate is sealed in foil pouch and et is blue / purple.
- uffer after washing.
- sufficiently and uniformly filled an aspirated when washing
- > Repeat assay ensuring Conjugate is reconstituted according to assay method.



# Cat No: K12-1591

All wells negative

 Test not performed correctly – correct reagents not added or not added in the correct sequence.

- 2. Contaminated Conjugate solution.
- 3. Over- washing of plate (e.g. inclusion of a long soak step).
- 4. Incorrect storage of kit.
- 5. Wash Buffer made up with Stop Solution instead of Wash Buffer Concentrate

- > Check procedure and check for unused reagents.
- Ensure that Stop Solution was not added before Conjugate or TMB.
- > Ensure that serum was diluted in correct Sample diluent; e.g. do not use Sample Absorbent for an IgG ELISA.
- > Dispense Conjugate directly from the bottle using a clean pipette tip; avoid transferring Conjugate to another container if possible.
   > Do not return unused Conjugate to bottle.
- > Do not return unused Conjugate to bottle.
   > Ensure all pipettes and probes used to dispense the Conjugate are clean and free from serum, detergent and bleach.
- > Repeat assay using recommended wash procedure.
- > Ensure kit is stored at 2-8°C, plate is sealed in foil pouch and desiccant sachet is blue / purple.
- > Ensure Wash Buffer is made up correctly.